

---

# MobilePar Hex 6

## User Manual



Please read over this manual before operating the light.

### Introduction

**Unpacking:** Thank you for purchasing the MobilePar Hex 6. Every MobilePar Hex 6l has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your fixture for any damage and be sure all accessories necessary to operate the unit has arrived intact. In the case damage has been found or parts are missing, please contact the manufacturer or your dealer for further instructions. Do not return this unit to your dealer without first contacting.

**Introduction:** The MobilePar Hex 6 is a DMX intelligent LED Par light. This par light is light weight and compact which makes it a great piece for mobile DJ's and clubs.

**Warning!** To prevent or reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.

**Caution!** There are no user serviceable parts inside this unit. Do not attempt any repairs yourself; doing so will void your manufactures warranty. In the unlikely event your unit may require service please contact the manufacturer or your dealer.

**PLEASE recycle the shipping carton whenever possible.**

### **General Instructions**

To optimize the performance of this product, please read these operating instructions carefully to familiarize you with the basic operations of this unit. These instructions contain important safety information regarding the use and maintenance of this unit. Please keep this manual with the unit, for future reference.

### **Features**

- Multi-colors
- Control Channels: 3 / 4 / 6 / 9 / 11 CH
- Color Strobe
- Master/Slave synchronization
- DMX-512 protocol
- IR remote control
- Electronic Dimming 0-100%
- Operating Modes: Sound activation, Auto and DMX control mode, IR remote
- Led operation menu with function buttons
- Daisy Chain Units Together in DMX Mode
- 1-20 flashes/sec strobe effect

## Safety Precautions

- To reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.
- Do not spill water or other liquids into or on to your unit.
- Be sure that the local power outlet match that of the required voltage for your unit.
- Do not attempt to operate this unit if the power cord has been frayed or broken. Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in case of an internal short.
- Disconnect from main power before making any type of connection.
- Do not remove the cover under any conditions. There are no user serviceable parts inside.
- Never operate this unit when it's cover is removed.
- Never plug this unit in to a dimmer pack.
- Always be sure to mount this unit in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall.
- Do not attempt to operate this unit, if it becomes damaged.
- This unit is intended for indoor use only; use of this product outdoors voids all warranties.
- During long periods of non-use, disconnect the unit's main power.
- Always mount this unit in safe and stable matter.
- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the point they exit from the unit.
- Cleaning -The fixture should be cleaned only as recommended by the manufacturer. See "Cleaning" for details.
- Heat -The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- The fixture should be serviced by qualified service personnel when:
  - A. The power-supply cord or the plug has been damaged.
  - B. Objects have fallen, or liquid has been spilled into the appliance.
  - C. The appliance has been exposed to rain or water.
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance
- Fuse standard is 2A/250V
- Grounded using yellow/green line
- The ambient temperature must always be under +35° C

## Set Up

**Power Supply:** Before plugging your unit in, be sure the source voltage in your area matches the required voltage for your FGLED 6-6IN1 PAR. The MobilePar

Hex 6 workable in 95-240V/50~60Hz. Because line voltage may vary from venue to venue, you should be sure your unit voltage matches the wall outlet voltage before attempting to operate you fixture.

**DMX Linking:** To ensure proper DMX data transmission, when using several DMX fixtures try to use the shortest cable path possible. The order in which fixtures are connected in a DMX line does not influence the DMX addressing. For example; a fixture assigned a DMX address of 1 may be placed anywhere in a DMX line, at the beginning, at the end, or anywhere in the middle. When a fixture is assigned a DMX address of 1, the DMX controller knows to send DATA assigned to address 1 to that unit, no matter where it is located in the DMX chain.

### Operating Instructions

Operating Modes: You can use the The MobilePar Hex 6 in 5 ways:

- Sound activation – The unit will activated by the sound signal.
- Static display – The unit will display the pattern in static way.
- Auto Mode - The unit will automatically chase through the different patterns.
- DMX control mode - This function will allow you to control each individual fixtures traits with a standard DMX 512 controller.
- Infrared remote control – This unit can be remote controlled by infrared remote controller.

**DMX Mode:** Operating through a DMX controller give the user the freedom to create their own programs tailored to their own individual needs. This function also allows you to use your fixtures as pattern changing lights.

1. This function will allow you to control each individual fixture's traits with a standard DMX 512 controller.
2. The led PAR uses 3 / 4 / 6 / 9 / 11 CH channels to operate. Please see "DMX Values and Functions" for the DMX traits.
3. To run your fixture in DMX mode, plug in the fixture via the XLR connections to any standard DMX controller . Set your desired DMX address following the set up specifications that come with your DMX controller .
4. The unit can automatically recognize the DMX signal once the DMX connection is done.

### DMX Values and Functions

#### 3CH Mode

	Value	RGBWAUV 6*6in1
CH1	0-255	RED dimmer (0-255)

CH2	0-255	GREEN dimmer (0-255)
CH3	0-255	BLUE dimmer (0-255)

#### 4CH Mode

	Value	RGBWAUV 6*6in1
CH1	0-255	RED dimmer (0-255)
CH2	0-255	GREEN dimmer (0-255)
CH3	0-255	BLUE dimmer (0-255)
CH4	0-255	WHITE dimmer (0-255)

#### 6CH Mode

	Value	RGBWAUV 6*6in1
CH1	0-255	RED dimmer (0-255)
CH2	0-255	GREEN dimmer (0-255)
CH3	0-255	BLUE dimmer (0-255)
CH4	0-255	WHITE dimmer (0-255)
CH5	0-255	AMBER dimmer (0-255)
CH6	0-255	UV dimmer (0-255)

#### 9CH Mode

	Value	RGBWAUV 6*6in1
--	-------	----------------

CH1	0-255	RED dimmer (0-255)
CH2	0-255	GREEN dimmer (0-255)
CH3	0-255	BLUE dimmer (0-255)
CH4	0-255	WHITE dimmer (0-255)
CH5	0-255	UV dimmer (0-255)
CH6	0-255	Auto
CH7	0-255	Auto Slow to Fast (0-255)
CH8	0-255	R, G, B,W,UV STROBE from slow to fast (0-255)
CH9	0-255	SOUND (Off 0-15 ON 16-255)

#### 11CH Mode

	Value	RGBWAUV 6*6in1
CH1	0-255	RED dimmer (0-255)
CH2	0-255	GREEN dimmer (0-255)
CH3	0-255	BLUE dimmer (0-255)
CH4	0-255	WHITE dimmer (0-255)
CH5	0-255	AMBER dimmer (0-255)
CH6	0-255	UV AMBER dimmer (0-255)
CH7	0-255	R, G, B, W, A, UV dimmer (0-255)
CH8	0-255	Auto
CH9	0-255	Auto Slow to Fast (0-255)

CH10	0-255	R, G, B,W, A,UV STROBE from slow to fast (0-255)
CH11	0-255	SOUND 1 (Off 0-15, ON 16-255)

### Touch Buttons

There are four touch buttons under the LED display: Menu, Down, Up, Enter. Normally, the LED will display the current DMX address code of the fixture. At this time, press Menu to choose the function you want to set up. Press and hold Up or Down to fast scrolling within the menu options. When an option is flashing the LED display, press Enter to confirm and Menu to exit.

1. Press the MENU button and UP button or DOWN button until A001 is displayed, then press ENTER

2

Start Up	RGBWAUV Version 1.0		
DMX addr CH mode	DMX addr: 001-512 CH-mode: 3 / 4 / 6 / 9 / 11		
Mast/Slave	Mast / Slave		
Manual	R/G/B/W/A/UV (000-255)		
SHND	Color	Auto	Auto Speed 01-08
		Color 01-50	
	Sound	S01	
		S02	
Fade	01-10		
Boot time	Operating Time		
Work time	Total Operating Time		
Battery Capacity	Battery Test		
LED Display time	Full on		
	20S/30S/40S/50S/60S		
IR INFA	ON		
	OFF		

For wireless receiver

## Wireless Module of DMX512

MODE: PCB-WI-DMX

### **Brief:**

DMX512 wireless receiver/transmitter transmits standard DMX512 protocol data (generated by console )by wireless way, which solves lighting control issues of wireless transmitting completely between console and lighting, lighting and lighting and so on, It get rid of connecting cable limited completely And also can ensure without any time delay when signal data is transmitting, signal data is real time and reliably.

This product adopt 2.4G ISM frequency section( global opening section) without permission limited

High effective GFSK modulate ,communication design ; 126 channels jumping frequency automatically, high anti-jamming ability.

**Application:** Upgrade DMX512 stage lighting

### **Product feature:**

1. Product name: 2.4G wireless DMX512 R/T moulding board
2. Small size, Easy to suit for interior of accessed lighting
3. Single key to operate, tricolor LED displaying
4. Transmitting standard DMX512 protocol data of console, also can transmitting lighting and lighting DMX512 protocol data.
5. 126 channels jumping frequency automatically, high anti-jamming ability. to ensure works reliability
6. 7 groups ID code settable, User can use 7 groups individual wireless net without any interfere each other in the same place..
7. Input voltage: 5VDC
8. Work frequency section: 2.4G ISM,126 channels frequency section
9. Max transmitting power rate: 20dBm



10. Receiver sensitive: -94dBm
11. Signal port: RS485 or CPU series port AURT

### **Charging way and how to use battery operating?**

1. Charging, please plug in ( AC power)
2. Battery operating, please press “ black switch on” 。

### **Operating manual:**

1. ID code and LED color corresponding relationship:
  - 1: RED
  - 2: GREEN
  - 3: RED+GREED
  - 4: BLUE
  - 5: RED+BLUE
  - 6: GREEN+BLUE
  - 7: RED+GREED+BLUE
2. Press key 1 time to indicate ID setting, Press again to set ID, then ID value adding 1 each time by press
3. Working condition:
  - LED constant lit up: no DMX or wireless signal.
  - Red LED flash: transmitting.
  - Green LED flash: receiving
4. RF frequency- ----- 2. 400-2. 525 G, total 126 channels, it's searching automatically,
5. ID Code- ---“1-7” groups ID code, press “KEY” for setting, it only can works under same ID code of transmitter and receiver.

### **Establishing Communication:**

1. Power on DMX512 wireless received board and transmitted board.
2. Press “Key” button to set same ID value of transmitted board and received board., please use different ID value if you need use more than

- 1 group wireless net at same time in same place.
3. The red LED flashes when transmitter transmits DMX data by no interfered frequency section, then receiver changes communicated frequency section. Green LED flash till received corrected same ID value, LED flash more fast once DMX data more fast.
  4. Communication was established correctly then

**Caution:**

- ✧ Don't repair this R/T board by yourself, it should be returned to manufacturer to repair if any problems.

**Infrared remote control**

To control the fixture you must aim the controller at the front of the fixture .  
 To used the remote control ,you must first activate the fixtures infrared receiver,  
 To activate the fixtures infrared receiver you should press the button MAST on the remote control, when the display screen show "yes" means the light is on mast mode, Press "Slav" to chose the slave mode.

ON/OFF turn on /off the light, If you don't need the light for a while, you could press OFF to save electric energy.

AUT Auto program aim UP or DOWN to chose auto mode.

SOU sound active mode press UP or Down to chose sound active mode 1 or 2

STRO strobe mode

SPEE speed

MAST master mode press and then the display screen show "yes" means the light is on master mode,

SLAV slave mode Press "Slav" to chose the slave mode.

ADD Add

FULL all leds light up

SHUT all leds turn off

Red red color

GREE green color

BLUE blue color

WHIT white color

AMBE amber color

PINK pink color

ORG orange color

CYAN cyan color

PURP purple color

**Cleaning**

Due to fog residue, smoke, and dust cleaning the internal and external optical lenses must be carried out periodically to optimize light output.

1. Use normal glass cleaner and a soft cloth to wipe down the outside casing.
  2. Clean the external optics with glass cleaner and a soft cloth every 20 days.
  3. Always be sure to dry all parts completely before plugging the unit back in.
- Cleaning frequency depends on the environment in which the fixture operates (i.e. smoke, fog residue, dust, dew).

### **Trouble Shooting**

Listed below are a few common problems the user may encounter, with solutions.

#### ***Unit not respond to DMX:***

1. Check that the DMX cables are connected properly and are wired correctly (pin 3 is “hot”; on some other DMX devices pin 2 may be ‘hot’). Also, check that all cables are connected to the right connectors ; it does matter which way the inputs and outputs are connected.

#### ***Unit does not respond to sound:***

1. Quiet or high pitched sounds will not activate the unit. If problems are not resolved, contact your dealer for service.

### **Specifications**

Model: MobilePar Hex 6I

Working Position: Any safe working position

Power Supply: Switching power supply

Voltage: AC 95-240V /50~60Hz

Power Consumption: 90W

Colors: RGBWAUV Color Mixing

LEDs: 6pcs 6in1 leds

Net Weight: 3Kg

Dimensions: 17\*17\*10 cm

Warranty: 1 year

**Note:** All information is subject to change without prior notice.



